ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION

ITEM NUMBER: LAM06-3654-M12-G02
NAME: Charleston Mirror
FINISH: Antique Gold Leaf

(A) (B) (C)

PARTS INCLUDED

(A) Round Screw	Qty: 6
(B) Plastic Anchor	Qty: 7
(C) Z-Bar	Qty: 4 (2 Preinstalled)
(D) Mirror	Qty: 1

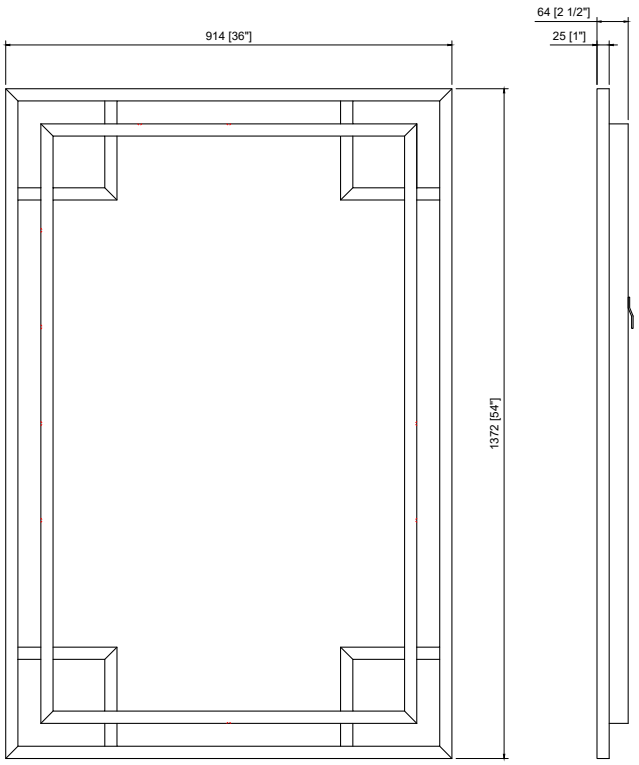

(D)

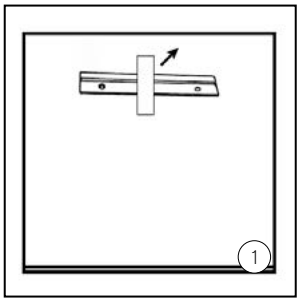

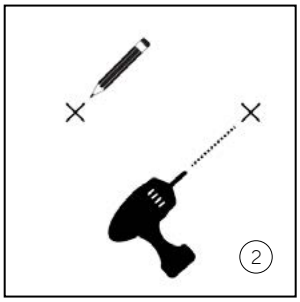

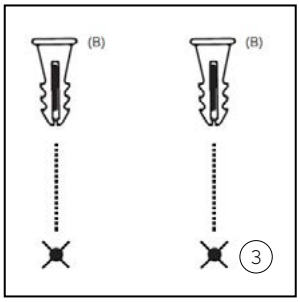

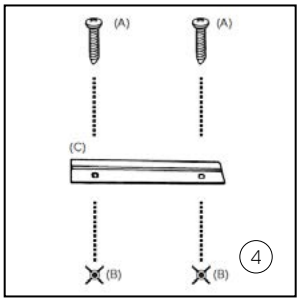

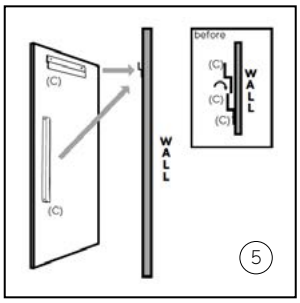

INSTALLATION TIPS

Refrain from disposing packaging materials until the assembly is complete.

Professional installation is required for mirrors that weigh over 50 lbs and/or are mounted on tile or stone surfaces.

This mirror can be mounted both vertically and horizontally.

TO HANG

1. Remove the taped Z-Bar (C) from the back of the mirror. The Z-Bar hardware will be in the security bag if it is not taped to the back.

2. Mark the wall where the Z-Bar (C) will hang according to your desired orientation, and then drill two holes at the marked locations.

3. Firmly insert the anchors (B) into the drilled holes.

4. Position the Z-Bar (C) over the anchors (B) and secure it to the wall using the round screws (A).

5. Hang the mirror on the wall by interlocking the Z-Bars (C).

CARE INSTRUCTIONS

To maintain the beauty and integrity of your mirror, gently wipe it with a soft, dry cloth and avoid using harsh chemicals or household cleaners to protect the finish.

WENDOVER ART GROUP

For customer service, contact 888-743-9232 or info@wendoverart.com.